

MP 90S - MP 95E

Use • Maintenance

Spare Parts List




Illustrazioni uso e manutenzione

Use and maintenance illustrations
Figures d'emploi et d'entretien
Gebrauchs- und Wartungsabbildungen
Ilustraciones de operación y mantenimiento
Ilustrações de uso e manutenção
Иллюстрации эксплуатации и техобслуживания
Εικόνες χρήσης και συντήρησης

Testo uso e manutenzione

Use and maintenance text
Texte d'emploi et d'entretien
Gebrauchs- und Wartungstext
Texto operación y mantenimiento
Manual de uso e manutenção
Текст эксплуатации и техобслуживания
Κείμενο χρήσης και συντήρησης

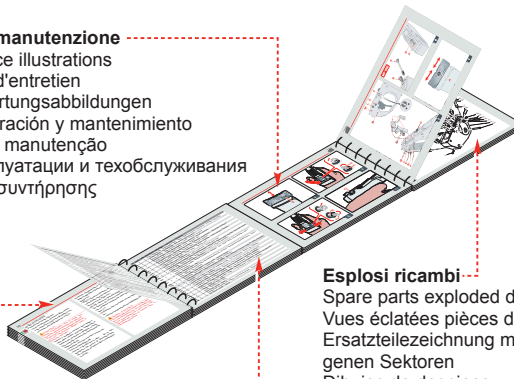

Esplosi ricambi

Spare parts exploded drawings
Vues éclatées pièces détachées
Ersatzteilezeichnung mit herausgezogenen Sektoren
Dibujos de despiece
Desenhos das peças de substituição
Развёртки запчастей
Ανάπτυξη ανταλλακτικών

Distinta ricambi

Spare parts list
Liste pièces détachées
Ersatzteilliste
Hoja de repuestos
Lista das peças de substituição
Спецификация запчастей
Φύλλο ανταλλακτικών



G0047302 - 01/2010

 **Benelli**

Benelli Armi S.p.A.

Via della Stazione, 50
61029 Urbino - Italy
Tel. ++ 39-0722-3071
Fax ++ 39-0722-307206
E-mail: marketing@benelli.it
<http://www.benelli.it>

Quality Assurance
System certified by the
Italian Ministry of Defence,
General Department
of Land Weapons,
according to Law.

NATO AQAP 2110



 **BenelliUSA**

Benelli USA Corporation

Head Office:

17603 Indian Head Highway
Accokeek, MD 20607-2501
Phone 301-283-6981 - Fax 301-283-6988
E-mail: BENUSA1@AOL.com
Website: www.benelliusa.com

Ship Warehouse:


901 8th Street
Pocomoke MD, 21851

Illustrazioni uso e manutenzione

Use and maintenance illustrations
Figures d'emploi et d'entretien
Gebrauchs- und Wartungsabbildungen
Ilustraciones de operación y mantenimiento
Ilustrações de uso e manutenção
Иллюстрации эксплуатации и техобслуживания
Εικόνες χρήσης και συντήρησης

Testo uso e manutenzione

Use and maintenance text
Texte d'emploi et d'entretien
Gebrauchs- und Wartungstext
Texto operación y mantenimiento
Manual de uso e manutenção
Текст эксплуатации и техобслуживания
Κείμενο χρήσης και συντήρησης

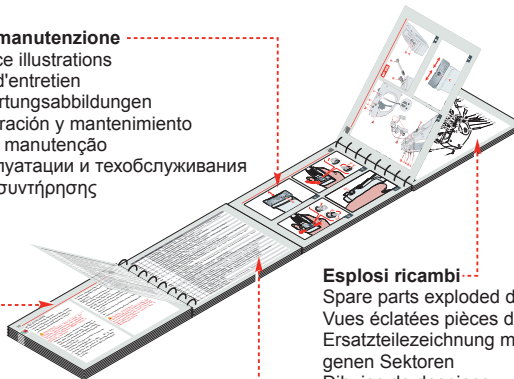

Esplosi ricambi

Spare parts exploded drawings
Vues éclatées pièces détachées
Ersatzteilezeichnung mit herausgezogenen Sektoren
Dibujos de despiece
Desenhos das peças de substituição
Развёртки запчастей
Ανάπτυξη ανταλλακτικών

Distinta ricambi

Spare parts list
Liste pièces détachées
Ersatzteilliste
Hoja de repuestos
Lista das peças de substituição
Спецификация запчастей
Φύλλο ανταλλακτικών

The Benelli logo consists of a dark grey square icon on the left, followed by the word "Benelli" in a bold, red, sans-serif font.

Benelli

MP 90S - MP 95E

Illustrazioni uso e manutenzione - Esplosi ricambi

Use and maintenance illustrations - Spare parts exploded drawings

Figures d'emploi et d'entretien - Vues éclatées pièces détachées

Gebrauchs- und Wartungsabbildungen - Ersatzteilezeichnung mit herausgezogenen Sektoren


Ilustraciones de operación y mantenimiento - Dibujos de despiece

Ilustrações de uso e manutenção - Desenhos das peças de substituição

Иллюстрации эксплуатации и техобслуживания - Развёртки запчастей

Εικόνες χρήσης και συντήρησης - Ανάπτυξη ανταλλακτικών



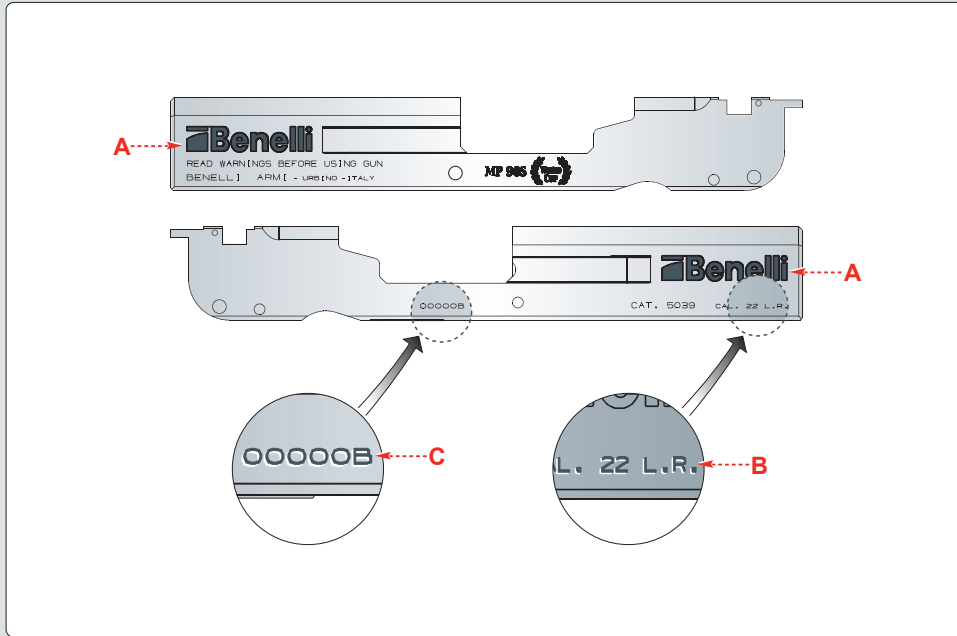

MP 95E

TAV 5

